
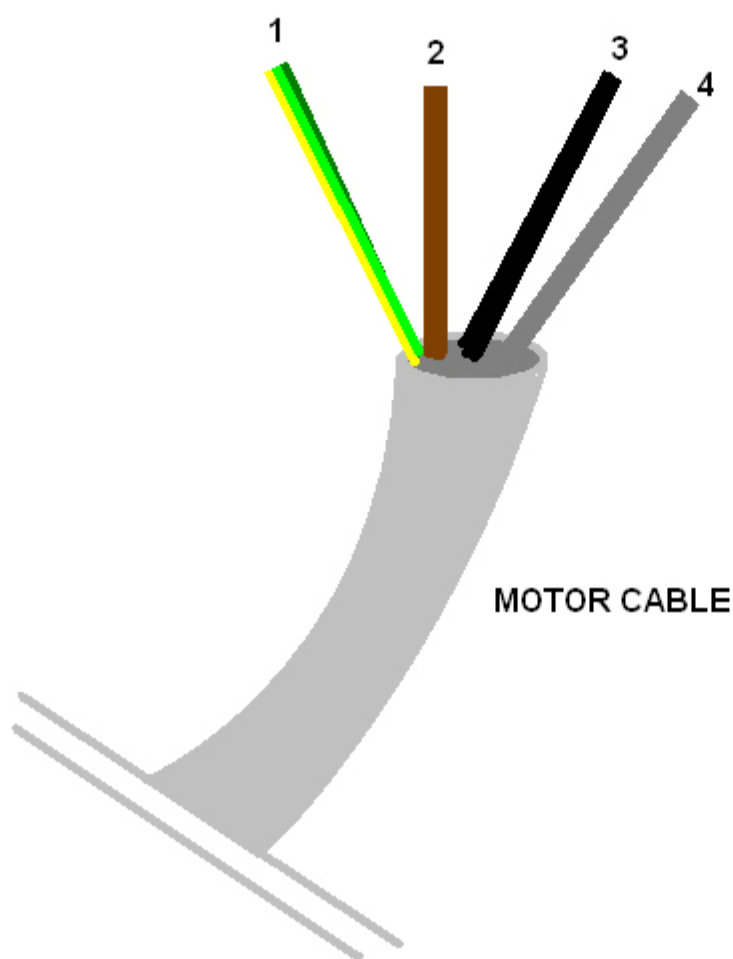


## CONNECTING THE CAPACITORS IN 240 VOLT MOTORS

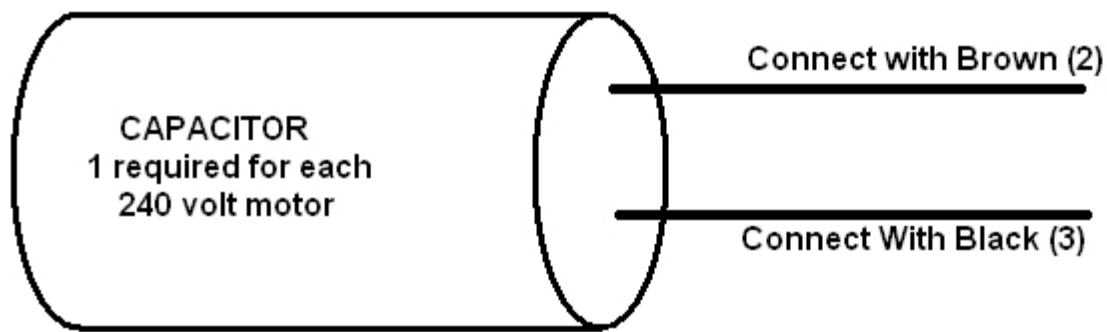

- 1- Earth
- 2 & 3 - Open & Close Phase
- 4- Common (Neutral)

IF THE MOTOR DIRECTION IS WRONG  
REVERSE THE BLACK & BROWN PHASES